

Configuring N1MM Plus to Broadcast Score Data

NOTE: Broadcasting score data for WRTC is different than using public Live Scores Websites. Please follow these instructions carefully.

First, **please disable Windows Firewall on each PC.** Sometimes this prevents the score data from begin seen across the Ethernet switch.

For connecting to your local area network, configure each PC to use these IP addresses:


PC A: 192.168.73.1

PC B: 192.168.73.2

To enable score posting in N1MM Plus version 1.0.6291 or later, perform the following steps on just one of your PCs:

1. In the Config menu, choose "Configure Ports, Mode Control, Audio, Other..." menu item
2. In the Configurer window, check "Score" and enter the this IP address and Port:

192.168.73.255:12060

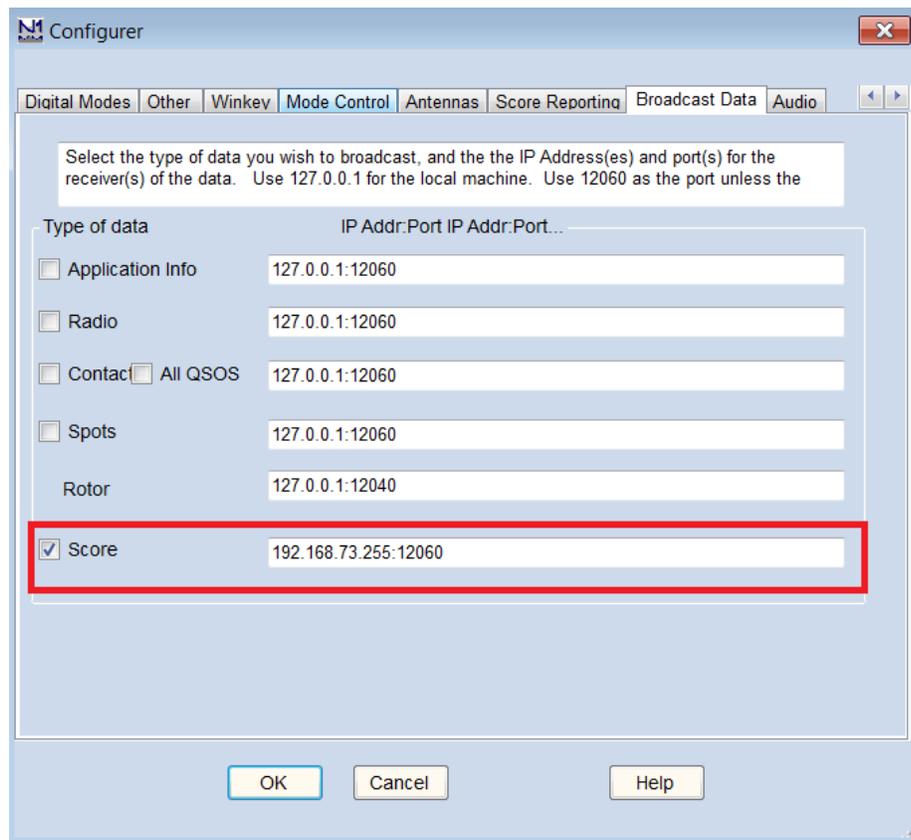

The screenshot shows the 'N1MM Configurer' window with the 'Broadcast Data' tab selected. The window contains a table for configuring broadcast data. The 'Score' row is highlighted with a red border, indicating it is the current focus. The 'Score' checkbox is checked, and the IP address and port '192.168.73.255:12060' are entered in the corresponding text field. Other rows include 'Application Info', 'Radio', 'Contact', 'Spots', and 'Rotor', all with their respective checkboxes unchecked and default IP addresses and ports.

Type of data	IP Addr:Port
<input type="checkbox"/> Application Info	127.0.0.1:12060
<input type="checkbox"/> Radio	127.0.0.1:12060
<input type="checkbox"/> Contact <input type="checkbox"/> All QSOS	127.0.0.1:12060
<input type="checkbox"/> Spots	127.0.0.1:12060
Rotor	127.0.0.1:12040
<input checked="" type="checkbox"/> Score	192.168.73.255:12060

3. Click OK

4. Have your referee text the word **myteam** to the Scoreboard telephone number
 - a. He should receive this text message:

“Your team is [Leader Call]/[Mate Call]”

- b. If he receives a message that he is not yet registered with a team, contact WRTC HQ
5. Connect your SCC (with its data modem and SD card already inserted) to your Ethernet Switch and plug it in
 - a. Within 2-3 minutes, your referee should receive this text message:

“Your SCC has successfully connected to the Scoreboard Server.”
 - b. If the referee does not receive this text message within 5 minutes, contact WRTC HQ
6. Start entering some QSOs into your log. It will take the SCC about 10 minutes to initialize with your logging program and start posting scores to the Scoreboard system.
7. If you have access to the Internet on a mobile device on Friday during set up, please check <http://sb.wrtc2018.de> to make sure your score is posting.
8. If the referee received each of the text messages listed in steps 4 and 5, and you are not seeing your score posted to the web site, please review the setup instructions on Page 1 and try again.