

Configuring TR4W to Broadcast Score Data

NOTE: Broadcasting score data for WRTC is different than using public Live Scores Websites. Please follow these instructions carefully.

First, **please disable Windows Firewall on each PC.** Sometimes this prevents the score data from being seen across the Ethernet switch.


For connecting to your local area network, configure each PC to use these IP addresses:

PC A: 192.168.73.1

PC B: 192.168.73.2

To enable score posting in TR4W version 4.67.13 or later, perform the following steps. This only needs to be done on one of the two computers:

1. In the Configuration commands window, set:
 - a. **UDP BROADCAST SCORE** to **TRUE**
 - b. **UDP BROADCAST PORT** to **12060**
 - c. **UDP BROADCAST ADDRESS** to **192.168.73.255**

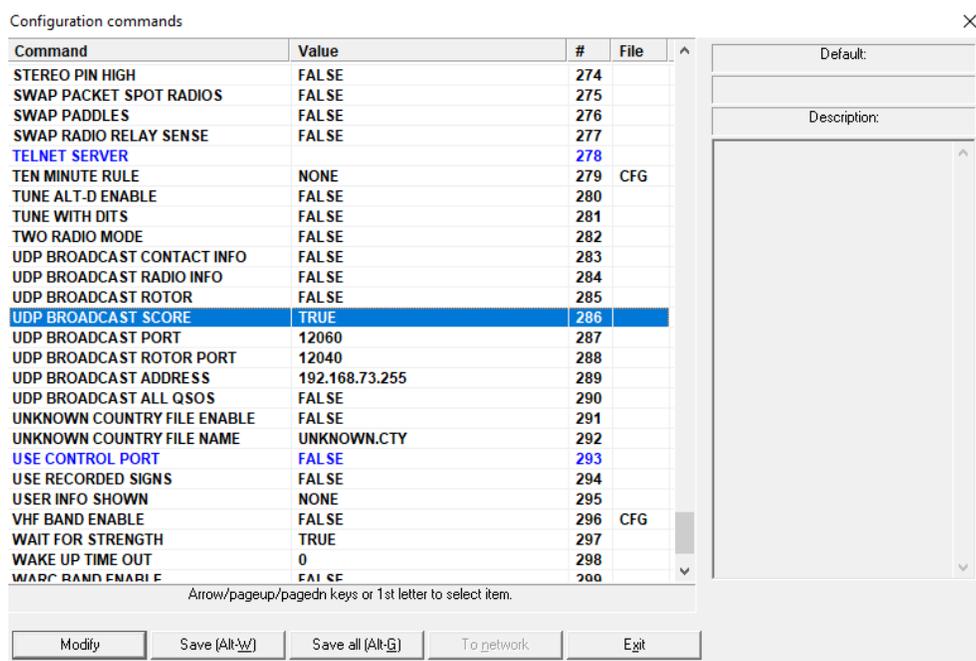

2. Click Save all (alt-G)

3. Have your referee text the word **myteam** to the Scoreboard telephone number
 - a. He should receive this text message:

“Your team is [Leader Call]/[Mate Call]”

- b. If he receives a message that he is not yet registered with a team, contact WRTC HQ
4. Connect your SCC (with its data modem and SD card already inserted) to your Ethernet Switch and plug it in
 - c. Within 2-3 minutes, your referee should receive this text message:

“Your SCC has successfully connected to the Scoreboard Server.”
 - d. If the referee does not receive this text message within 5 minutes, contact WRTC HQ
5. Start entering some QSOs into your log. It will take the SCC about 10 minutes to initialize with your logging program and start posting scores to the Scoreboard system.
6. If you have access to the Internet on a mobile device on Friday during set up, please check <http://sb.wrtc2018.de> to make sure your score is posting.
7. If the referee received each of the text messages listed in steps 3 and 4, and you are not seeing your score posted to the web site, please review the setup instructions on Page 1 and try again.