

## Configuring Win-Test to Broadcast Score Data

**NOTE: Broadcasting score data for WRTC is different than using public Live Scores Websites. Please follow these instructions carefully.**

First, **please disable Windows Firewall on each PC.** Sometimes this prevents the score data from being seen across the Ethernet switch.


For connecting to your local area network, configure each PC to use these IP addresses:

PC A: 192.168.73.1

PC B: 192.168.73.2


To enable score posting in Win-Test, perform the following steps:

1. When you create a log, you must click the “Enable time distribution across the network” checkbox in the Contest Confirmation window:

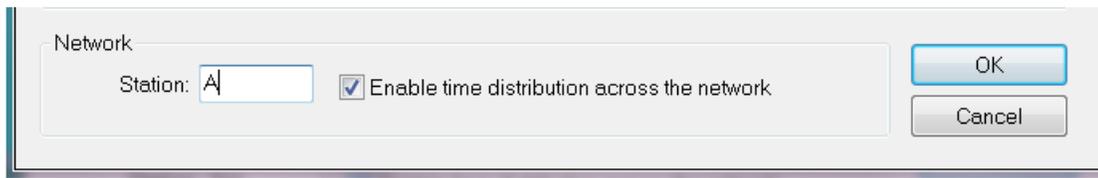

**If you do not do this, the Broadcast score menu option in Step 3 will not be enabled**


2. Open menu Options...Configure Interfaces. In the Ethernet section, make sure “Enable Ethernet network” is checked:

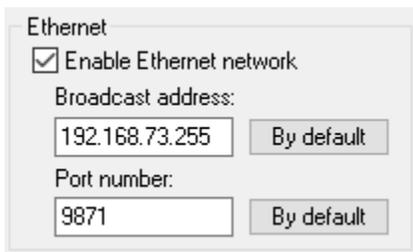


**The Broadcast Address must be 192.168.73.255.**

Use the default port 9871

3. Once your log is open, open the Summary window that displays the band breakdown. With your mouse, right-click on the Summary window and check “Broadcasting on the network...Enable”:

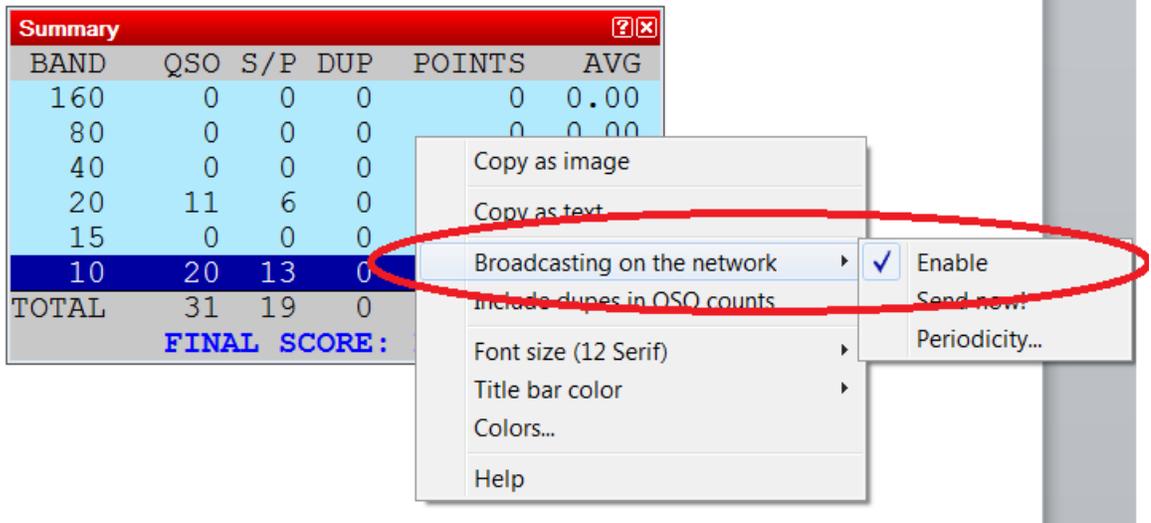

- By default, Win-Test will broadcast score data across the network every 5 minutes. However, you can change the broadcast interval by right-clicking on the Summary window and choosing “Broadcasting on the network...Periodicity...”. This will open a window where you can specify an interval between 1 and 60 minutes:

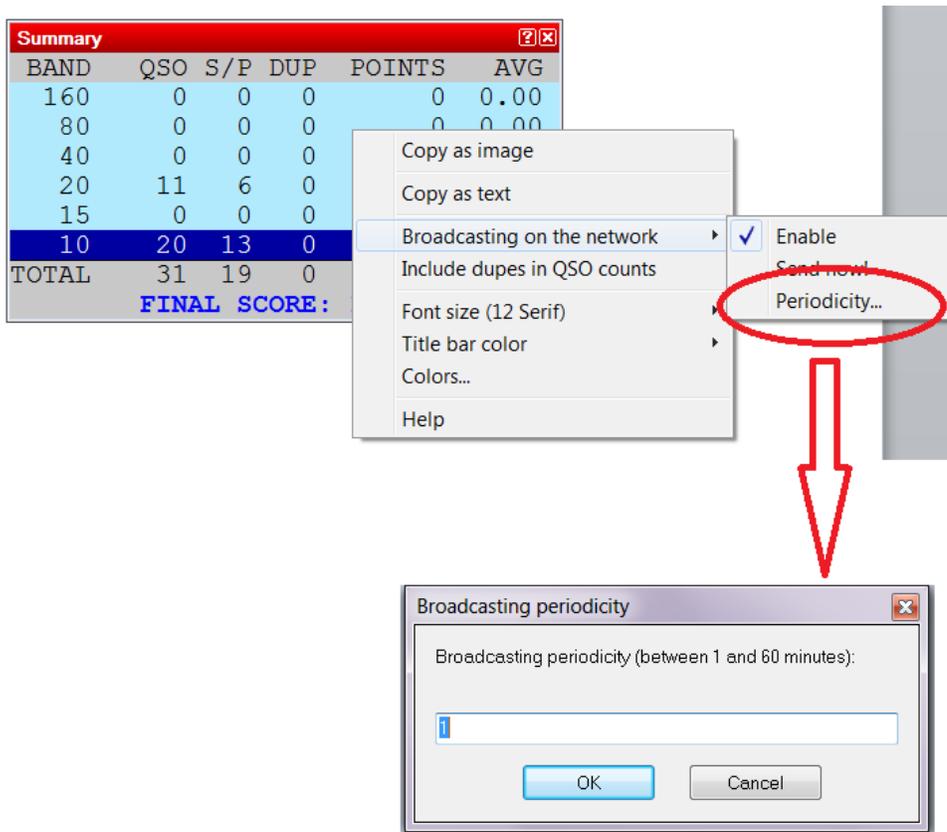

Broadcasting periodicity

Broadcasting periodicity (between 1 and 60 minutes):

OK Cancel

5. Have your referee text the word **myteam** to the Scoreboard telephone number
  - a. He should receive this text message:

**“Your team is [Leader Call]/[Mate Call]”**

- b. If he receives a message that he is not yet registered with a team, contact WRTC HQ
6. Connect your SCC (with its data modem and SD card already inserted) to your Ethernet Switch and plug it in

- a. Within 2-3 minutes, your referee should receive this text message:

**“Your SCC has successfully connected to the Scoreboard Server.”**

- b. If the referee does not receive this text message within 5 minutes, contact WRTC HQ
7. Start entering some QSOs into your log. It will take the SCC about 10 minutes to initialize with your logging program and start posting scores to the Scoreboard system.
8. If you have access to the Internet on a mobile device on Friday during set up, please check <http://sb.wrtc2018.de> to make sure your score is posting.
9. If the referee received each of the text messages listed in steps 5 and 6, and you are not seeing your score posted to the web site, please review the setup instructions on Pages 1 and 2 and try again.